

WINDSHIELD ICE INDICATOR LIGHT - MAINTENANCE PRACTICES

1. General

- A. For removal and installation procedures for the windshield ice indicator light, refer to Chapter 30, Windshield Ice Indicator Light - Maintenance Practices.